


This document will tell you how to connect it to your video unit as well as the basic functions of the camera. For more detailed instructions please refer to the owner's manual.

*If at any time you need assistance installing or operating your camera please call our pager at **1-877-869-3302** or dial **eConsult Test** from your video unit.*

Installation:

You will receive an additional cable with your Handycam – a yellow bag labeled *AV CABLES 6in S-Video Composite Video Adapter Cable*. This cable will be plugged into the back of your Polycom video unit, then into the A/V cables provided with the camera (yellow end to yellow end).

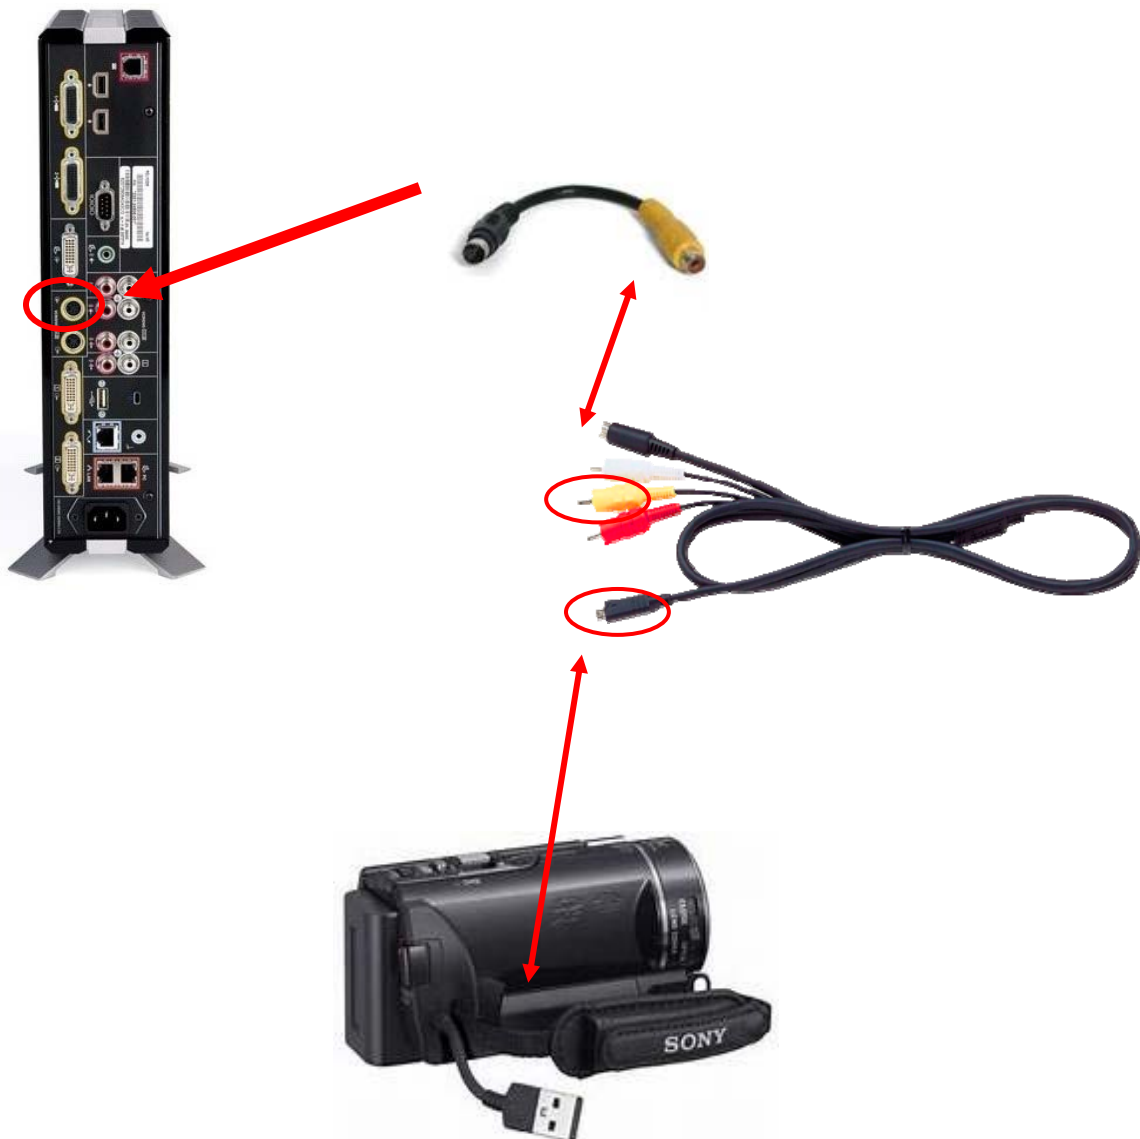

You will need to program your Handycam as Preset 3 on your video unit. To do this select the *Camera* button on the remote, arrow over to the third selection (*Exam Cam*), next select *Preset*, then the number 3 until you receive a display on the screen letting you know that it has been stored.



Use:

Your Handycam will be able to capture both live video as well as still pictures for use in an eConsult encounter. Please refer to the attached reference and/or your owner’s manual (pages 26-33) for capturing live video and still pictures, as well as how to replay them for providers if needed.

Capturing Video

1. Open the lens cover



2. Open the LCD screen and press MODE to toggle between Movie and Camera



3. Press START/STOP to start video
 - To stop video, press START/STOP again
 - You can capture photos during video stream by pressing PHOTO (Dual Capture)



Capturing Photos

1. Open the LCD screen and press MODE to toggle between Movie and Camera



2. Press PHOTO lightly to adjust the focus, then press it fully.
 - When the focus is adjusted properly, AE/AF lock indicator appears on the LCD screen



Zooming


W (Wide Angle): Wider range of view


T (Telephoto): Close view

- You can magnify images using optical zooming up to 25 times the original size with default setting
- Move the power zoom lever slightly for a slower zoom. Move it further for a faster zoom.



Playback

1. Open the LCD screen and press the  button on the camcorder to enter the play back mode

- You can also enter the playback mode by selecting  on the LCD screen



2. Select arrows on the LCD screen to move the desired video or picture to the center and then select it

3. Select the image by touching it on the LCD screen

- Press the green square shown to enlarge picture



❖ **Please note that you will need to have the battery charged and ready at all times. It is difficult to maneuver the camera while it is plugged in. Instructions on how to charge your camera are on page 18 of the owner’s manual.**

**** If you need assistance installing or operating your Handycam please dial our pager at 1-877-869-3302 or dial eConsult Test from your video unit ****